


The quantity of caulking supplied for your building is enough to seal the connection between the outer curve angle and the first, and last arch only (not supplied for each arch and arch panel). See the drawing below, or for additional information refer to the "SteelMaster Construction & Foundation Manual."

To purchase additional caulking for your building, please contact your SteelMaster sales representative.

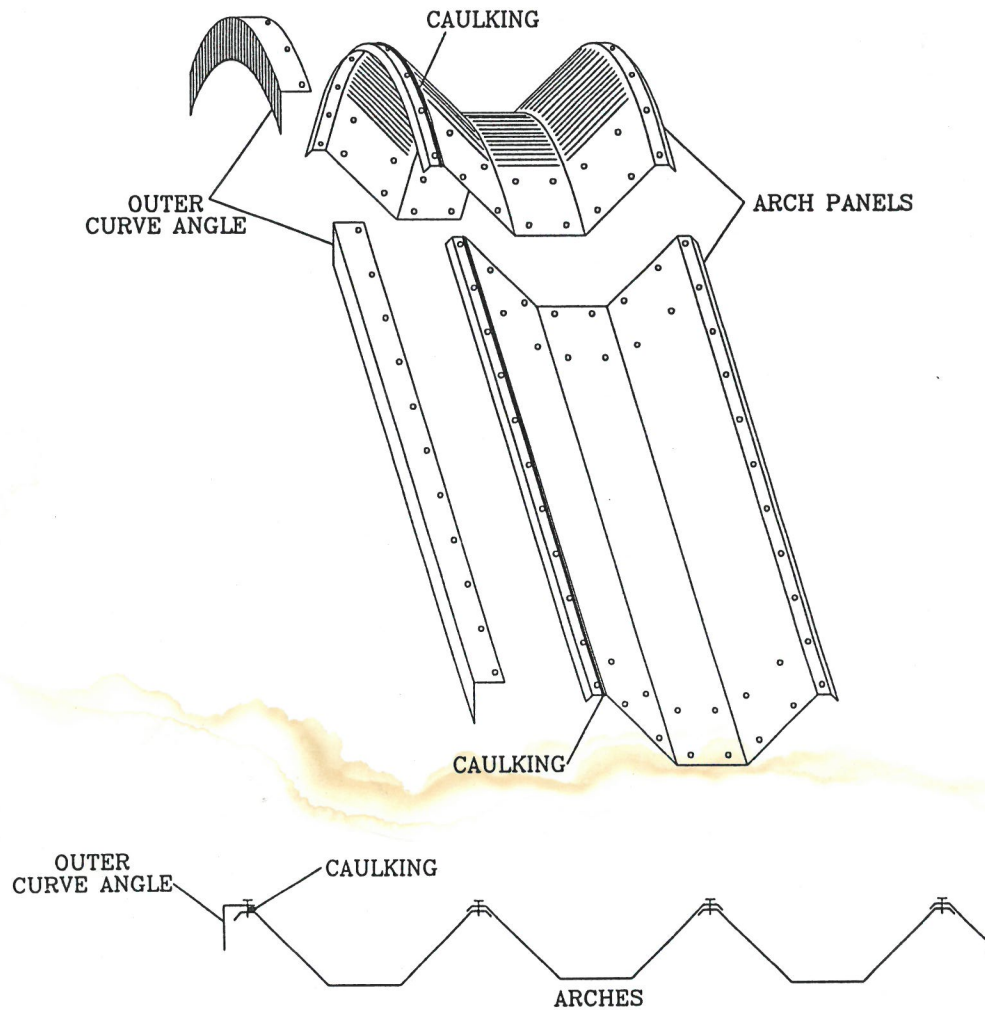

-INNER CURVE ANGLE NOT SHOWN FOR CLARITY.