

LELO

SONA™ 2 Cruise



USER MANUAL

SONA\_2\_Cruise\_PUB1\_0323

Experience a new type of stimulation for  
a new kind of orgasm that feels much  
stronger and more focused on your  
pleasure points.

**Enjoy it often, wisely and with care.**

Congratulations on acquiring the SONA™ 2 Cruise.

Before getting more closely acquainted with it, please take a moment to look through this user manual.

## **IMPORTANT**

Your pleasure object has been locked for transportation.

To unlock, simply connect the charger or see below.

## **SAFETY**

- Please consult your healthcare provider with any questions or concerns you may have regarding your condition.
- This product can be used by adults only. Keep out of reach of children.
- People with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.
- Only use the product for the intended purpose. Sharing sex toys with other people may transmit sexual diseases. Do not share your sex toys with people other than your partner.
- Use protective measures with your partner if necessary.
- Do not use the product if you detect any cracks or signs of degradation on the covering material.
- To prevent stains, do not keep your product on the absorbent surfaces. If your product operates abnormally, turn off and consult the support section on our website.
- Do not use the product if one or more components are damaged.

## COMPLIANCE STATEMENT

### a. WARNING

Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the equipment and/or void any relevant warranties.

### b. FCC and IC statements

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This class B digital apparatus complies with Canadian ICES-003.

### b. Déclarations relatives à la FCC et à l'IC

Ce produit est conforme à la section 15 des règles de la FCC et aux normes d'exemption de licence RSS d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) il doit accepter toute interférence reçue, notamment celles susceptibles d'entraîner un fonctionnement non désiré.

Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna.
- Increasing the separation between the equipment and receiver.
- Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consulting the seller, the device dealer or an experienced radio/TV technician for help.

## USING YOUR SONA™ 2 Cruise

Before first use, charge your SONA™ 2 Cruise for 2 hours.

 
Press and hold the **(0)** button to turn it on.

Press the **(0)** button to switch between 12 modes.

Use the **+** and **-** buttons to increase or decrease the intensity.

Press and hold the **(0)** button to turn off.

## GETTING TO KNOW YOUR SONA™ 2 Cruise

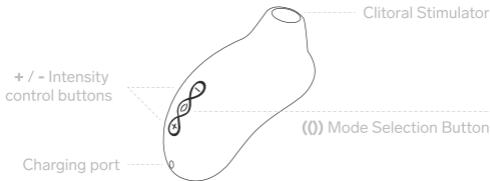

# Cruise Control™

T E C H N O L O G Y

## CRUISE CONTROL

Cruise Control is a fully automatic function, not a setting that requires you to turn it on or off. Cruise Control is designed to detect any slowing motion of the motor and can boost the motor up again via PWM (Pulse Wave Modulation).

 
In doing so, Cruise Control ensures that you enjoy consistent power and intensity, even while SONA™ 2 Cruise is pressed firmly against your body.

## USING SONA™ 2 Cruise

### How to hold



### Where to place

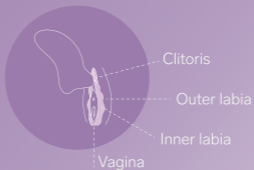


Keep in mind that SONA™ 2 Cruise will initiate automatic shutdown every 20 minutes to assure the motor doesn't overheat if the product is misused.

**Tip:** For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to SONA™ 2 Cruise before and during use.

## CHARGING YOUR SONA™ 2 Cruise

 - Insert the DC plug into the DC port at the base of your SONA™ 2 Cruise.
- Insert the mains plug into a USB Port. The LED on the interface of your SONA™ 2 Cruise will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your SONA™ 2 Cruise will emit a blinking white light.

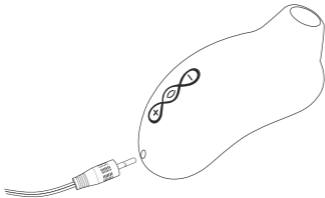

**Only use original chargers provided by LELO with your SONA™ 2 Cruise.**



## **CLEANING, STORAGE, AND SAFETY**

Using SONA™ 2 Cruise with hand creams or silicone-based lubricants may make the silicone permanently tacky.

SONA™ 2 Cruise is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your SONA™ 2 Cruise thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your SONA™ 2 Cruise in direct sunlight and NEVER expose it to extreme heat.

Store your SONA™ 2 Cruise in a dust-free place and keep it away from products of other materials.

The appliances must only be supplied at SELV.

## TROUBLESHOOTING

### **The LED on your SONA™ 2 Cruise does not pulse when the charger is connected?**

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

### **Your SONA™ 2 Cruise does not activate when the () button is pressed?**

- The battery is empty. Recharge your SONA™ 2 Cruise.
- The interface of your SONA™ 2 Cruise is locked. Hold down + and – for 3 seconds.

If you experience any other problems with your SONA™ 2 Cruise or if you have any questions regarding the operation, please contact:

**[customercare@lelo.com](mailto:customercare@lelo.com)**

## SPECIFICATIONS

**Materials:** Body-safe silicone, ABS Plastic

**Finish:** Smooth

**Size:** 112 x 55 x 51 mm / 4.4 x 2.1 x 2 in

**Weight:** 125 g / 4.4 oz

**Battery:** Li-Ion 520 mAh 3.7 V

**Charging:** Up to 2 h at 5.0 V 500 mA

**Rated Power:**

- Input: 5 V 2.5 W
- Output: 3.7 V 1 W

**User time:** Up to 2 h

**Standby:** 90 days

**Frequency:** 130 Hz

**Max. noise level:** < 60 dB

**Interface:** 3 buttons

## **REGISTER WARRANTY**

To activate your 1-year Limited Warranty, register the number provided on the LELO Authenticity Card at [LELO.COM/SUPPORT](http://LELO.COM/SUPPORT).

## **1-YEAR WARRANTY**

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials.

The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty.

If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at [LELO.COM](http://LELO.COM) and then select the option to make a warranty claim.

Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

## DISPOSAL INFORMATION

**Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):**

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



RoHS



UK  
CA



SERIAL NO.

SN

IPX 7



MANUFACTURER DATE



FOLLOW INSTRUCTION FOR USE



ETICHETTA AMBIENTALE	
Categoria	Lettere guida per la raccolta
SCATOLA COLORATA	RACCOLTA CARTONGIO
SCATOLA DI CARTONE	RACCOLTA CARTONGIO
MASSOIO IN ENR	RACCOLTA PLASTICA
PISTOLA NON TESSUTO	RACCOLTA PLASTICA
PISTOLA NON TESSUTO	RACCOLTA PLASTICA
MANUALE	RACCOLTA CARTA

Hereby, LELOi AB declares that the radio equipment type [Non-Specific Short Range Device] is in compliance with Directive 2014/53/EU. LELOi AB declares that the product is also compliant with Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address: <http://www.lelo.com/regulatory>

**DISCLAIMER:** Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2023 LELoI AB. All rights reserved.

LELoI AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by LELo Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELo Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELo Sweden.

Made in China.

US and International patents or patent applications apply to this product: visit <https://www.lelo.com/intellectual-property>

[www.lelo.com](http://www.lelo.com)