

 





TIMOTHY OULTON

CAUSEWAY EXTENSION DINING TABLE 280-340CM ASSEMBLY INSTRUCTIONS


PARTS INCLUDED

- A [1] TABLETOP
- B [2] LEGS

NO.	ITEM	DESCRIPTION	QTY.
1		Hex Socket Bolt (8 X 80mm)	16 pcs.
2		Flat Washer (8 x 22mm)	16 pcs.
3		Spring Washer	16 pcs.
4		Allen Key	1 pc.

ASSEMBLY INSTRUCTIONS

1. Please find the corresponding numbered parts before you install the unit! Locate legs (B) onto the tabletop (A). (Noted: the floor must be covered with protective material so that the tabletop is not touching the floor directly). Secure legs to tabletop using 80mm hex socket screws (1), 16mm spring washers (3) and 22mm flat

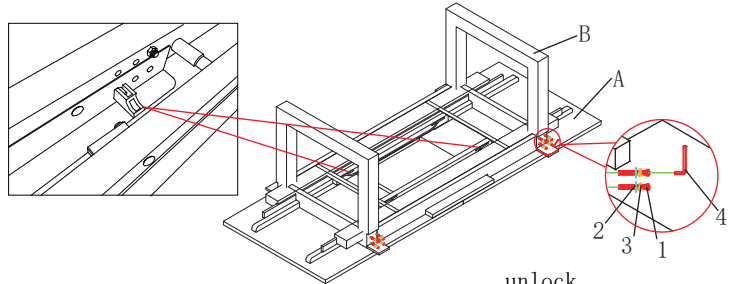

2. To open and extend the table:

- a. Firstly, make sure you unlock the mechanism on the metal sliders underneath the tabletop.

- b. Pull open the tabletop, carefully and gently. Keep moving with a consistent speed and force.

3. To close and shorten the table:

- a. Firstly, make sure you unlock the mechanism on the metal sliders underneath the tabletop.

- b. Pull open the tabletops, carefully and gently. Keep moving with a consistent speed and force.

- c. Stop pulling when you hear a click from the slider mechanism.

- d. Push the tabletop forward and the extension leaf will lower. Continue pushing until the tabletop has closed together.

4. If there is an issue with the mechanism and how to fix. Looks quite jumbled up now as all together. If too much force is used to open/close the table, the panel may malfunction. In this instance, please follow the instructions below to fix the mechanism.

- a. Ensure the gaps between the tabletop and apron is even.


- b. Ensure the 4 rollers on the underside of the table apron are attached fully and straight in line with the tabletop.

- c. If the spring has popped out, follow these 3 steps:


- Step 1. Unscrew the screws and remove the extension panel from the sliders.

- Step 2. Lift the extension panel and re-insert the spring into the plastic tubes which are plastic tubes


Step 1:

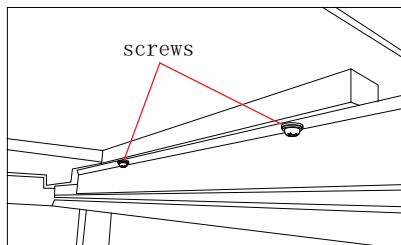

Step 2:

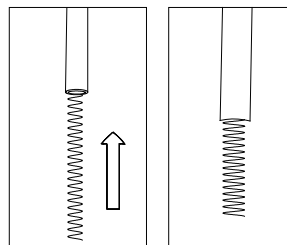

Step 3:

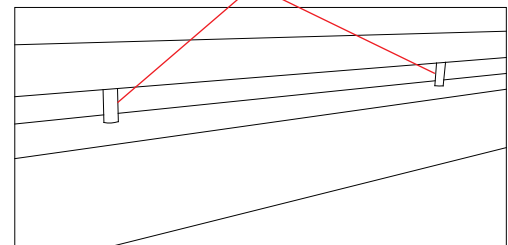

CARE INSTRUCTIONS

1. Use coasters or placemats to help prevent marks or stains.
2. Avoid mineral oil, as its usage could discolour the wood.
3. Wipe the table clean with a soft, dry cloth after each use.

IMPORTANT SAFETY INSTRUCTIONS

1. Exercise care and precaution when moving furniture as careless handling may cause injury and damage.
2. Never drag furniture. Always lift it.
3. Periodically check all fixtures to ensure none have come loose.
4. Retighten when necessary. Incorrect assembly of furniture can be dangerous.
5. Assembly should be carried out by competent personnel.
6. No liability will be accepted for damage or injury caused by incorrectly assembled furniture.
7. Heavy item warning.
8. Take care and seek assistance when lifting heavy furniture to avoid personal injury and/or damage to product.
9. Do not handle from ends with leaves installed. This could damage the end boards of the table.