 



# Installation Tools

## How to Order:

### Post Driver

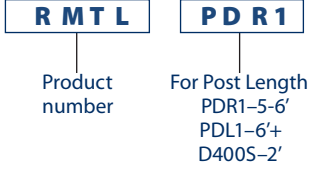

## For all soils and applications

Carsonite's Standard Post Driver (PDR1) is used to install Utility Marker, Tuff-Flex™, Curv-Flex™, Dual-Sided Marker and GreenLine™ Single Curve Marker. 48" in length, this driver is for posts from 5 to 6 feet long.

Carsonite's Long Post Driver (PDL1) is used to install Utility Marker, Tuff-Flex, Curv-Flex, Dual-Sided Marker and GreenLine Single Curve Marker. At 56" in length, it is for posts over 6' long.

Carsonite's Short Post Driver (D400S) is used to install Utility Marker, Tuff-Flex, Curv-Flex, Dual-Sided Marker and GreenLine Single Curve Marker. At 24" in length, this driver is for posts under 5' long.

### Guide Tube



Post Driver

The Sentry™ Socket Driver (RMTLDSMD10) is for installing Sentry post sockets.

### Sentry Socket Driver



Sentry Socket Driver

The Guide Tube (RMTLPGT1) gives an added assist in keeping posts vertical during installation. Also useful in preventing posts from flexing when installing into hard or rocky soil. The Guide Tube is useful with RMTLPDR1 or RMTLPDL1 drivers.

### Utility ID Driver



Utility ID Driver

Utility ID Post Driver (RMTLD250). This accessory is intended for use with the Utility ID Post (CBM).

### Pilot Hole Driver



Pilot Hole Driver

The U-Channel Driver (RMTLSD300) is intended for installing Carsonite's Curv-Flex or other Carsonite markers that utilize the U-Channel option.

### U-Channel Driver



U-Channel Driver

The Pilot Hole Driver (RMTLDP100) is for use in hard or rocky soil when driving posts can be exceedingly difficult. The driver's spaded head leaves a hole to assist in driving the post. For use with all Carsonite markers.

### Post Puller



Post Puller

Carsonite's Post Puller (RMTLCPP) is used to remove posts that may need replacing. Use the Post Puller with any of our flat markers.

Material: Welded Steel

Other specialized tools are also available. Contact your representative.