 


Getting to know your Echo Show 10

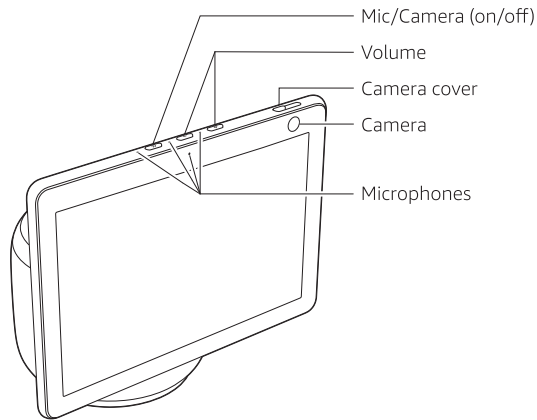

Additional features: built-in smart home hub and rotating smart screen.

Alexa is designed to protect your privacy



Wake word and indicators

Alexa doesn't begin listening until your Echo device detects the wake word (for example, "Alexa"). A blue light indicator lets you know when the device is recording your request to stream to Amazon's secure cloud. If you like, you can also enable an audio tone.



Microphone and camera controls

You can electronically disconnect the mics and camera with the press of a button. Slide the built-in cover to close the camera.



 
Voice history

Want to know exactly what Alexa heard? You can view and delete the voice recordings associated with your account in the Alexa app at any time.

These are just a few of the ways that you have transparency and control over your Alexa experience. Explore more at amazon.com.au/alexaprivacy.

Place your Echo Show 10

Thoroughly clean and dry the location you've chosen for your Echo Show 10. Then plug the included power adaptor into the base of the device and set it in place.

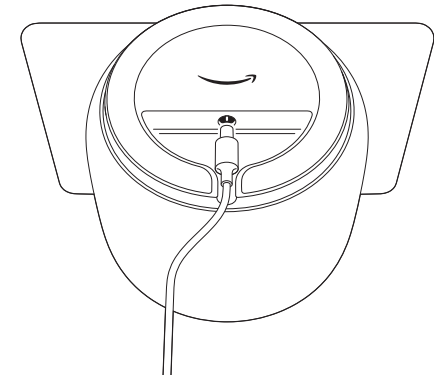

To give Echo Show 10 room to rotate, place it at least 15.5 cm from a wall. If you need to place it near a wall, don't worry—it can learn to adjust its rotation range.

Set up your Echo Show 10

Slide the included rotation footprint template around the body of the device.

Important: this template shows the keep-out space around the device. Always keep this space clear of objects such as cups, which may get knocked over.

Plug the adaptor into a wall socket and follow the on-screen instructions to register your Echo Show 10.

During registration, Echo Show 10 will rotate to calibrate and locate its idle position. After calibrating, you may need to adjust the device so that the screen is facing the direction you'll most often see it from.

Control the rotating smart screen

 
You can turn motion on, or off, in your device's settings or by asking Alexa. For example, to stop the screen from rotating, simply say "Alexa, turn off motion".

For help and troubleshooting, go to Help & Feedback in the Alexa app or visit www.amazon.com/devicesupport.

Explore your Echo Show 10


To change your settings

Swipe down from the top of the screen, or say "Alexa, show Settings".



To access your shortcuts

 Swipe left from the right side of the screen.



Download the Amazon Alexa app



Installing the app on your phone or tablet helps you get more out of your Echo Show 10. It's where you set up calling and messaging, manage music, lists, settings and news.

Give us your feedback

Alexa is always getting smarter and adding new skills. To send us feedback about your experiences with Alexa, use the Alexa app, visit www.amazon.com/devicesupport, or simply say "Alexa, I have feedback".

Things to try with your Echo Show 10

Watch TV shows, listen to music, see photos

Alexa, show me new TV shows from Prime Video.

Alexa, show me my photos.

Alexa, play today's hits on Amazon Music.

Alexa, play the news.

Stay organised and manage your home

Alexa, add bananas to my shopping list.

Alexa, set an egg timer for 5 minutes.

Alexa, how many millilitres in half a cup?

Alexa, show me chocolate chip cookie recipes.

Voice control your smart home

Alexa, show me the front door.

Alexa, goodnight.

Stay connected

Alexa, call Mum.

Alexa, announce "dinner is ready".

Some features may require customisation in the Alexa app, a separate subscription or an additional compatible smart home device.

You can find more examples and tips in the Alexa app.