

# AHL Dual Mode & ARL Dual Mode Battery Installation Guide

1

---

**Unscrew the bottom portion of the light.**

This will open the battery compartment.

2

---

**Check the battery.**

The larger metal section goes in first. The smaller button section facing up into the light.

3

---

**Locate the manual button.**

To test that you have installed the battery correctly, cover the solar panel completely with your hand and press the manual button once to select Flashing Mode.

4

---

**Press the button a second time.**

This will employ Steady Burn. Press the button a third time to turn it off. If you do not cover the solar panel completely and press the manual button, nothing will happen.

5

---

**Take care of your AHL Dual Mode.**

We recommend removing the batteries and storing them separately when the airport lights are not in use to prolong their battery life.