



⚠ WARNING	
<ul style="list-style-type: none"> • INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body. 	

⚠ AVERTISSEMENT	
<ul style="list-style-type: none"> • RISQUE D'INGESTION : ce produit contient une pile bouton. • Avaler une pile bouton peut entraîner d'importantes blessures, et même la MORT. • L'ingestion d'une pile bouton peut causer des Brûlures Chimiques Internes en seulement 2 heures. • CONSERVEZ les piles neuves et usagées HORS DE PORTÉE des ENFANTS. • Appelez les soins médicaux d'urgence si vous suspectez qu'une pile a été avalée ou insérée dans une partie du corps. 	

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: lithium metal, CR2032.
- Nominal battery voltage: 3.0 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 158°F (70°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

- Retirez immédiatement les piles usagées ou éliminez-les en accord avec les lois locales. Gardez-les hors de portée des enfants. Ne les jetez pas aux ordures ménagères dans la poubelle domestique. Ne jetez pas de piles dans un feu.
- Même des piles usagées peuvent causer des blessures graves ou mortelles.
- Appelez votre centre antipoison pour connaître le traitement en cas d'ingestion.
- Type de pile : métal-lithium, CR2032.
- Tension nominale de la pile : 3.0 V
- Les batteries non-rechargeables ne doivent en aucun être rechargées.
- Ne forcez pas la décharge ou la recharge des piles. Ne les désassemblez pas. Ne les exposez pas à une température supérieure à 70°C (158°F). Ne les jetez pas dans le feu. Cela peut provoquer des blessures dues à des émanations gazeuses, à des fuites ou à une explosion avec pour conséquence des brûlures chimiques.
- Assurez-vous que les polarités (+ et -) de la pile sont respectées.
- Ne mélangez pas des piles neuves et usagées, de marques ou de types différents tels que carbone-zinc, alcalines, ou rechargeables.
- Retirez puis recyclez ou éliminez immédiatement les piles des équipements qui n'ont pas été utilisés depuis longtemps, en accord avec les lois locales.
- Assurez-vous de toujours sécuriser le compartiment à piles. S'il ne se ferme pas correctement, arrêtez d'utiliser le produit. Retirez les piles et conservez-les hors de portée des enfants.

TIMEX

TIMEX DIGITAL WATCH

[BATTERY WARNING](#)2
[USER GUIDE](#).....3

10N-095000-01 6.21.24

Register your product at <https://www.timex.com/product-registration>

TIMEX

Timex Digital Watch

User Manual



FEATURES:

- Alarm
- Dual Time
- Stopwatch
- Countdown Timer
- Indiglo® night-light
- Calendar
- 30 Meters Water Resistance



Basic Operations:

- Press button A to switch modes (Stopwatch, Countdown Timer, Alarm)
- Press button D to use the Indiglo® night-light

1. Time of Day, Date, 12-Hour/24-Hour Setting

From normal time-of-day press and hold button B for a few seconds to enter time setting mode. Press button C to set the desired hour. Press button A when finished to set the minutes. Press button C to set the desired minutes. Press button A when finished. Press button C to reset the seconds to zero. Press button A when finished. Press button C to set the Month. Press button A when finished. Press button C to set the Day. Press button A when finished. Press button C to set the Year. Press button A when finished. Press button C to select !2 Hour or 24 Hour time display. Press button B when finished to exit setting mode and return to time-of-day.

2. Stopwatch


From time-of-day press the A button once to enter Stopwatch mode. Press button C to start the stopwatch. Press button B to take a split or press button C to stop the stopwatch. While stopwatch is stopped press and hold button B to reset. Press button A to return to time-of-day.

3. Countdown Timer

From time of day press the A button twice to enter the Timer mode. The default countdown time is set for 5 minutes but can be set up to 24 hours. To set a new countdown time, in Countdown mode press and hold button B for a few seconds. Press button C to set the countdown Hours. Press button A when finished. Press button C to set the countdown minutes. Press button A when finished. Press button C to set the countdown seconds. Press button A when finished. Press button C to turn Repeat feature On or Off. Press button A when finished. Now press button B to return to Countdown. To start the Timer press button C. Press button C again to pause the Timer. While timer is paused hold button B to reset Timer.

4. Alarm

From time of day press the A button three times to enter Alarm mode. In Alarm mode press the C button repeatedly to choose the following settings:

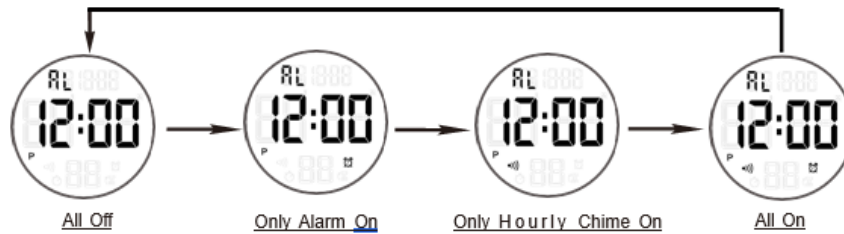

When finished, hold button B for a few seconds to enter the Alarm setting mode. Press the C button to set the Hours. Press button A when finished. Press the C button to set the Minutes. Press button A when finished. Press the B button when finished. Press the A button to return to time of day.

Battery Replacement

The watch button cell or coin battery is not intended to be replaced by a consumer. Only a jeweler or other professional is to replace the battery.