



NESPRESSO[®]

DESCALING
GUIDE





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.

Vertuo



VERTUOPLUS



Duration: 20 minutes

STEP 1



The descaling alert appears when the light becomes green and red. Only several coffees can be made after this alert appears before descaling becomes mandatory.

STEP 2



Turn the machine on by pushing the button.

STEP 3



Open the machine head by pushing the lever upwards, and let the used capsule be ejected.

STEP 4



Close the machine by pushing the lever down.

STEP 5



To turn the machine off, press and hold the lever down for 3 seconds.

STEP 6



Empty the cup support and the used capsule container.

STEP 7



Fill the water tank with one unit of Nespresso descaling liquid and at least 17 ounces of water.

STEP 8



To enter the special functions menu, while the machine is off, push the button and the lever down simultaneously for 3 seconds.

STEP 9



An orange steady light indicates entry into the special functions menu.



STEP 10



Press and release the lever once to enter descaling mode.

STEP 11



Place a receptacle that will hold a minimum of 27 ounces under the coffee spout.

STEP 12



Press and release the button once to begin descaling.

STEP 13



The orange light will blink throughout the descaling process. The solution will disperse in stops and starts. The machine will stop automatically when the cycle is complete.

STEP 14




Note that the process can be stopped at any time by pushing the button.

STEP 15



When the descaling cycle has finished, proceed with a rinsing cycle. Empty, clean, and rinse the water tank and cup support thoroughly and refill the tank with fresh water.

STEP 16

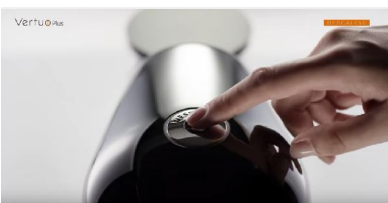

Press and release the button once to begin the rinsing cycle. The machine will stop automatically when the cycle is complete.

STEP 17



The orange light will blink once every 2 seconds. Rinse and refill the tank with fresh drinking water.

STEP 18



To exit descaling mode, press and hold the button and the lever at the same time for 3 seconds, or until the light becomes green. Allow the machine to rest for 10 minutes. The machine is now ready for use.