

PlayStation.

Wireless headset

Headset: CUHYA-0080

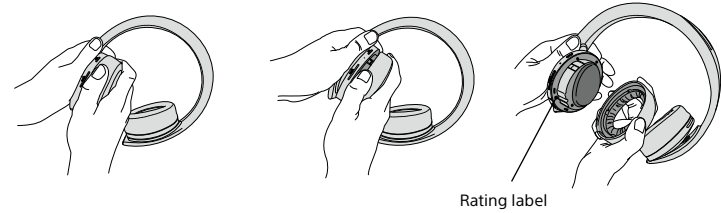 
Wireless Adaptor: CUHYA-0081

Instruction Manual

For more instructions about the use of this product (including the Headset Companion app), visit playstation.com/helpme.

| |
|---|
| EN |
| Precautions |
| Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference. |
| Safety |
| <ul style="list-style-type: none">Observe all warnings, precautions, and instructions. CHOKING HAZARD– Small parts. Keep out of the reach of small children. |
| Use and handling |
| <ul style="list-style-type: none">Stop using the wireless headset immediately if you begin to feel tired or if you experience discomfort or pain in your head while operating the wireless headset. Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing: <ul style="list-style-type: none">Limit the amount of time you use the headset at high volume. Avoid raising the volume to block out noisy surroundings. Lower the volume if you can't hear people speaking near you. If you feel that the headset is irritating your skin, stop using it immediately. Do not expose the headset to high temperatures, high humidity or direct sunlight. Do not put heavy objects on the headset. Do not allow liquid or small particles to get into the headset. Do not throw or drop the headset, or subject it to strong physical shock. Do not place any rubber or vinyl materials on the headset exterior for an extended period of time. Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth. Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you. Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft. The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate. |


| |
|---|
| FR |
| Part names and functions |
| <p>Front</p> <ul style="list-style-type: none">Headband R marking SOUND/CHAT buttons <ul style="list-style-type: none">Adjust the chat voice volume in relation to the game sound. Microphone (integrated) <ul style="list-style-type: none">Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise). Status indicator <ul style="list-style-type: none">Power/audio mode switch <ul style="list-style-type: none">Sets the audio mode or turns off headset. Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app. |
| <p>Rear</p> <ul style="list-style-type: none">L marking VSS (Virtual Surround Sound) button <ul style="list-style-type: none">The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off. MUTE button <ul style="list-style-type: none">Press to switch microphone MUTE on and off. To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off. |
| <p>Bottom</p> <ul style="list-style-type: none">VOL +/- buttons <ul style="list-style-type: none">Adjusts the volume of the headset. USB port <ul style="list-style-type: none">Connect to a supported USB device to charge the headset. Audio input jack <ul style="list-style-type: none">When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off. |
| <p>Wireless adaptor</p> <ul style="list-style-type: none">Reset button Status indicator |


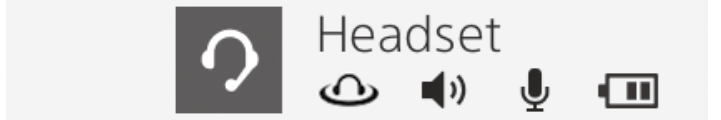 
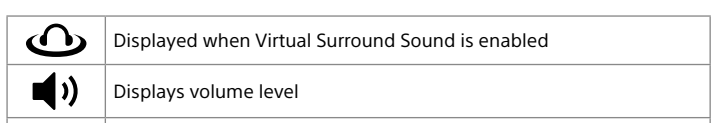 
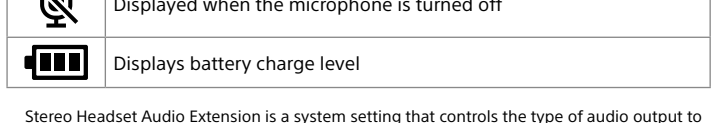 
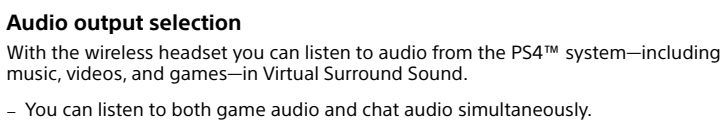 
| |
|---|
| DE |
| Headset Companion app |
| With the Headset Companion app, you can select an additional audio mode for your headset. There are several modes to choose from, each optimized to enhance different audio characteristics. These modes are developed exclusively for use with PS4™ systems. |
| To get one of these audio modes, download the Headset Companion app from PlayStation™Store and follow the on-screen instructions. |
| Once this process is complete, you can experience your selected mode on your headset by sliding the power/audio mode switch to position "2". |
| Resetting the headset |
| If the headset does not respond when you try to operate it, reset it by doing the following: |
| 1 Connect the wireless adaptor to a PS4™ system or other powered USB port. |
| 2 Insert a small pin or similar object (not included) into the hole surrounding the reset button in the wireless adaptor, and push in for at least one second. |
| 3 On the headset, hold down the MUTE button and the VSS button. |
| 4 While still holding down the MUTE button and the VSS button, slide the power/audio mode switch to position "2". |
| Rating label |
| The rating label contains specific model, manufacture and compliance information. It is located on the right earpad. |
| 1 Remove the earpad and access the rating label: |
| 1 Use one hand to hold the headset in place. |
| 2 With your other hand, grip the earpad frame. |
| 3 Pull the earpad out. |
| To replace the earpad, align the earpad with the inner frame. Push it back onto the frame until it clicks. |
|  |
| Rating label |
| End of life product recycling |
| The wireless headset is made of plastics, metals, and a lithium-ion battery. Follow local regulations when disposing of the wireless headset. Sony products can be recycled for free in the United States and Canada by dropping the product off at a number of nationwide locations. For details, visit www.sony.net/SonyInfo/csr/SonyEnvironment/spdoptlight/ . |

 
 
 
 
| |
|---|
| FR |
| Part names and functions |
| <p>Front</p> <ul style="list-style-type: none">Headband R marking SOUND/CHAT buttons <ul style="list-style-type: none">Adjust the chat voice volume in relation to the game sound. Microphone (integrated) <ul style="list-style-type: none">Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise). Status indicator <ul style="list-style-type: none">Power/audio mode switch <ul style="list-style-type: none">Sets the audio mode or turns off headset. Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app. |
| <p>Rear</p> <ul style="list-style-type: none">L marking VSS (Virtual Surround Sound) button <ul style="list-style-type: none">The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off. MUTE button <ul style="list-style-type: none">Press to switch microphone MUTE on and off. To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off. |
| <p>Bottom</p> <ul style="list-style-type: none">VOL +/- buttons <ul style="list-style-type: none">Adjusts the volume of the headset. USB port <ul style="list-style-type: none">Connect to a supported USB device to charge the headset. Audio input jack <ul style="list-style-type: none">When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off. |
| <p>Wireless adaptor</p> <ul style="list-style-type: none">Reset button Status indicator |

| |
|---|
| EN |
| Precautions |
| Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference. |
| Safety |
| <ul style="list-style-type: none">Observe all warnings, precautions, and instructions. CHOKING HAZARD– Small parts. Keep out of the reach of small children. |
| Use and handling |
| <ul style="list-style-type: none">Stop using the wireless headset immediately if you begin to feel tired or if you experience discomfort or pain in your head while operating the wireless headset. Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing: <ul style="list-style-type: none">Limit the amount of time you use the headset at high volume. Avoid raising the volume to block out noisy surroundings. Lower the volume if you can't hear people speaking near you. If you feel that the headset is irritating your skin, stop using it immediately. Do not expose the headset to high temperatures, high humidity or direct sunlight. Do not put heavy objects on the headset. Do not allow liquid or small particles to get into the headset. Do not throw or drop the headset, or subject it to strong physical shock. Do not place any rubber or vinyl materials on the headset exterior for an extended period of time. Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth. Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you. Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft. The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate. |

| |
|---|
| FR |
| Part names and functions |
| <p>Front</p> <ul style="list-style-type: none">Headband R marking SOUND/CHAT buttons <ul style="list-style-type: none">Adjust the chat voice volume in relation to the game sound. Microphone (integrated) <ul style="list-style-type: none">Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise). Status indicator <ul style="list-style-type: none">Power/audio mode switch <ul style="list-style-type: none">Sets the audio mode or turns off headset. Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app. |
| <p>Rear</p> <ul style="list-style-type: none">L marking VSS (Virtual Surround Sound) button <ul style="list-style-type: none">The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off. MUTE button <ul style="list-style-type: none">Press to switch microphone MUTE on and off. To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off. |
| <p>Bottom</p> <ul style="list-style-type: none">VOL +/- buttons <ul style="list-style-type: none">Adjusts the volume of the headset. USB port <ul style="list-style-type: none">Connect to a supported USB device to charge the headset. Audio input jack <ul style="list-style-type: none">When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off. |
| <p>Wireless adaptor</p> <ul style="list-style-type: none">Reset button Status indicator |

| |
|---|
| EN |
| Headset Companion app |
| With the Headset Companion app, you can select an additional audio mode for your headset. There are several modes to choose from, each optimized to enhance different audio characteristics. These modes are developed exclusively for use with PS4™ systems. |
| To get one of these audio modes, download the Headset Companion app from PlayStation™Store and follow the on-screen instructions. |
| Once this process is complete, you can experience your selected mode on your headset by sliding the power/audio mode switch to position "2". |
| Resetting the headset |
| If the headset does not respond when you try to operate it, reset it by doing the following: |
| 1 Connect the wireless adaptor to a PS4™ system or other powered USB port. |
| 2 Insert a small pin or similar object (not included) into the hole surrounding the reset button in the wireless adaptor, and push in for at least one second. |
| 3 On the headset, hold down the MUTE button and the VSS button. |
| 4 While still holding down the MUTE button and the VSS button, slide the power/audio mode switch to position "2". |
| Rating label |
| The rating label contains specific model, manufacture and compliance information. It is located on the right earpad. |
| 1 Remove the earpad and access the rating label: |
| 1 Use one hand to hold the headset in place. |
| 2 With your other hand, grip the earpad frame. |
| 3 Pull the earpad out. |
| To replace the earpad, align the earpad with the inner frame. Push it back onto the frame until it clicks. |
|  |
| Rating label |
| End of life product recycling |
| The wireless headset is made of plastics, metals, and a lithium-ion battery. Follow local regulations when disposing of the wireless headset. Sony products can be recycled for free in the United States and Canada by dropping the product off at a number of nationwide locations. For details, visit www.sony.net/SonyInfo/csr/SonyEnvironment/spdoptlight/ . |

| |
|---|
| FR |
| Initial setup |
| 1 Charge the headset by connecting it to a USB port with a USB cable. The headset may need up to 3.5 hours to charge fully. |
|  |
| 2 Insert the wireless adaptor into the USB port. |
| 3 Slide the power switch on the headset to position "1" or "2". |
| Using the headset with PlayStation 4 systems |
| This headset is compatible with PS4™ system software version 5.00 or later. More than one headset can be used with a PS4™ system. |
| Always update your system software to the latest version. |
| Status display |
| When first connecting to a PS4™ system or when changing the settings, the following status information is displayed in the upper left corner of the screen: |
|  |
|  |
|  |
|  |


 
| | |
|---|--|
|  | Displayed when Virtual Surround Sound is enabled |
|  | Displays volume level |
|  | Displayed when the microphone is turned off |
|  | Displays battery charge level |

Stereo Headset Audio Extension is a system setting that controls the type of audio output to the wireless headset. It is available only when the wireless adaptor is inserted.

Audio output selection
With the wireless headset you can listen to audio from the PS4™ system—including music, videos, and games—in Virtual Surround Sound.

– You can listen to both game audio and chat audio simultaneously. Use the SOUND/CHAT buttons to adjust the relative volume of game audio versus chat audio.

– You can change the audio output to the headset so that you can hear only chat audio.

To change the audio output select  (Settings) =>  (Devices) => [Audio Devices] => [Output to Headphones].

| | | |
|-----------------------------|--|---------------------------|
| Output to Headphones | VSS (Virtual Surround Sound) button | SOUND/CHAT buttons |
| All Audio | Enabled | Enabled |
| Chat Audio | Disabled | Disabled |

NOTE:
On a PS4™ system, the wireless headset defaults to "ON" [All Audio].

Using the headset with a computer
You can use the headset with a PC (with Windows® or macOS) that has a USB port. Insert the wireless adaptor into a USB port on the computer you want to use and then turn on the headset.

Hints

- The headset might not work with some computers.
- The VSS (Virtual Surround Sound) button and SOUND/CHAT buttons can be used only when the headset is connected to a PS4™ system.

Using your headset with PlayStation VR
You can use an audio cable to connect your headset to the stereo headphone jack of PlayStation VR. This will output all game audio processed by the PlayStation VR, including 3D audio if supported by the game title.

Note
This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Use this headset with PlayStation VR
Note
This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note
This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

| | |
|--|---|
| Specifications | |
| Input power rating | 5W 500 mA (Wireless headset) <p>5W 100 mA (Wireless adaptor)</p> |
| Battery type | Built-in lithium-ion rechargeable battery |
| Battery voltage | 3.7 V |
| Battery capacity | 570 mAh |
| Operating environment temperature | 5 °C - 35 °C / 41 °F - 95 °F |
| Dimensions (w/h/d) | Wireless headset: 201 x 172 x 91 mm (7.9 x 6.8 x 3.6 in) <p>Wireless adaptor: 48 x 18 x 8 mm (1.9 x 0.7 x 0.3 in)</p> |
| Mass | Wireless headset: 230 g (8.6 oz) <p>Wireless adaptor: 6 g (0.19 oz)</p> |
| Communication system | 2.4 GHz RF |
| Maximum communication range | Approx. 10 m (33 ft) ¹ |
| Use time when fully charged | 7+ hours at mid volume level ² |
| Contents | Wireless headset (1) <p>Wireless adaptor (1)</p> <p>Audio cable 1.2 m (3.9 ft) (1)</p> <p>USB Cable (Type-A to Micro-B) 30.5 cm (1 ft) (1)</p> <p>Quick Start Guide (1)</p> <p>Instruction Manual (1)</p> |
| Country of origin | China |

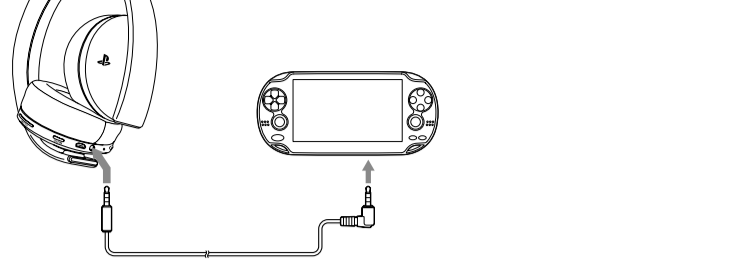 
¹ Actual communication range varies depending on factors such as obstacles between the headset and wireless adaptor, magnetic fields from electronics (such as a microwave oven), static electricity, antenna performance, and the operating system and software applications in use. Depending on the operating environment, reception may be interrupted.

² Actual use time varies depending on factors such as the battery charge and ambient temperature.

Design and specifications are subject to change without notice.

• On PlayStation/Vita systems, you can listen to audio in standard stereo format and use the voice chat feature.

• On other mobile devices, you can listen to audio in standard stereo format only.



| |
|---|
| Hints |
| <ul style="list-style-type: none">When the included audio cable is connected to the headset, the VSS (Virtual Surround Sound) button and the SOUND/CHAT buttons cannot be used. Output volume varies depending on the portable device that is connected. Adjust volume accordingly. If you use the supplied audio cable to connect the headset to your mobile device to listen to audio content and talk on the phone. <ul style="list-style-type: none">If you are unable to hear audio content using the cable with your mobile device, turn off headset power. Your device may only support use of a standard audio cable (not included) to listen to audio content using the headset. Note that standard audio cables do not support voice communication. This product is not compatible with all mobile devices. Some features may not work on all mobile devices. |

| |
|--|
| Charging the headset |
| When remaining battery level is low, the status indicator flashes red and a beep is heard. Charge the battery by connecting the headset to a supported USB device such as a PC. While the battery is charging, the status indicator lights up red. The status indicator light turns off when the battery is fully charged. |

Hints

- You can view the remaining battery charge on a PS4™ system. It is shown on the status display that appears when you change the headset settings.
- You might not be able to charge the battery if the USB device or the USB hub does not provide enough power for charging. Try connecting the headset to a different USB device or a different USB connector on the device.
- Charging takes approximately 3.5 hours when starting with no battery charge left.
- When the remaining battery charge is low, the headset beeps while it is connected and receiving an audio signal.
- It is recommended that you charge the battery in an environment with a temperature of 5 °C - 35 °C / 41 °F - 95 °F. Charging in other environments might not be as effective.
- If you do not plan to use the wireless headset for an extended period of time, it is recommended that you fully charge it at least once a year to help maintain battery functionality.

| | | |
|---|---------------------------|------------------------------------|
| Status indicator display | | |
| Headset | | |
| Indicator color | Flashing pattern | Headset status |
| Blue | Solid | In use |
| | Flashing once repeatedly | Pairing mode |
| | Flashing twice repeatedly | Waiting to connect |
| Red | Solid | Charging |
| Red (Headset turned on) | Flashing once repeatedly | Low battery |
| Red (Headset charging) | Flashing once repeatedly | Battery not charging ¹ |
| Red (Headset turned on, but doesn't play any sound) | Flashing once repeatedly | Firmware update error ² |
| Purple | Solid | Microphone input off |
| Purple | Flashing once repeatedly | Firmware update in progress |

¹ For repair options, visit www.playstation.com/helpme.

² If you see the flashing error light, retry the steps to Restore headset again. If you continue to see the error after the Restore attempt, then visit www.playstation.com/support/wirelessstereohsheadset.

| | | |
|-------------------------|---------------------------|-----------------------|
| Wireless adaptor | | |
| Indicator color | Flashing pattern | Headset status |
| Blue | Solid | In use |
| | Flashing once repeatedly | Pairing mode |
| | Flashing twice repeatedly | Waiting to connect |

PlayStation.

無線耳機組

耳機組: CUHYA-0080

無線適配器: CUHYA-0081

使用說明書

若要了解更多產品的使用說明 (包含耳機組同伴應用程式) ，請前往 playstation.com/helpme (僅提供英文) 。

| |
|--|
| 繁體中文 |
| 使用初期注意事項 |
| 使用前務請先 請先詳細閱讀本說明書及對應裝置的說明書，並妥善保存，以備將來參考之用。 |
| 關於安全 |
| <ul style="list-style-type: none">請於安全警告標文、注意事項及使用說明。 請將小零件放在兒童不該拿取的地方保管，避免兒童吞下發生窒息。 |
| 使用和保養 |
| <ul style="list-style-type: none">若您在使用無線耳機組時忽然開始感覺疲勞，或感覺頭暈時，請立即停止使用。如果不良症狀持續存在，請立即就醫。 避免長時間使用無線耳機組，請每 30 分鐘休息一次。 若使用無線耳機組時音量調整過高，可能會導致永久失聰。請將音量調整至安全水平，持續聆聽一段時間後，即應適當降低音量的聽覺感受。聽覺來自可能聽到一般集音，在實際上市可能聽覺高聲，若您感到聽覺輸出音量不正常的狀況，請立即停止使用耳機。若您無法在環境安靜、音場穩定，便會對聽覺造成疲勞，為保護您的聽覺： <ul style="list-style-type: none">使用耳機時請持續適當避免將音量調整過高。 避免長時間使用無線耳機組。 若無法減輕疲勞身體的人的說話聲，請降低音量。 當耳機對您的皮膚造成不適時，請即離開使用。 請勿將耳機靠近高溫處，避免接觸或靠近日光直射的地方。 請在耳機組上安裝耳機。 請勿讓液體或細小零件掉入耳機組。 請勿拆除或破壞無線耳機組，或導致其對強力的外力衝擊。 請在產品包裝上保留所有標籤及指示，瞭解其指定的電子裝置或電磁波產品，例如加油站、醫院、工地、可能破壞的電子裝置或電器上。 本裝置使用的電池若損壞，可能含有發生火災或化學爆炸的危險性。請您在 60°C / 140°F 左右的溫度下分解處理其電池。 |

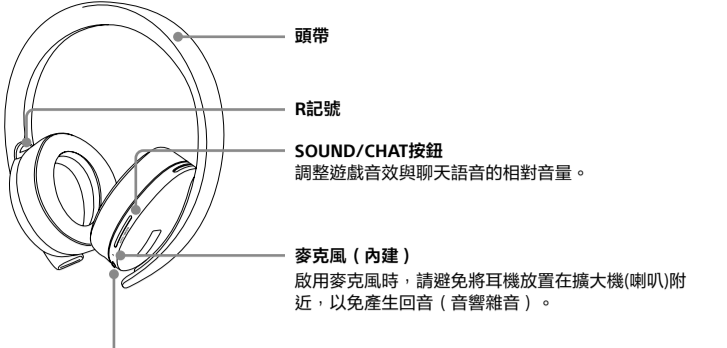 
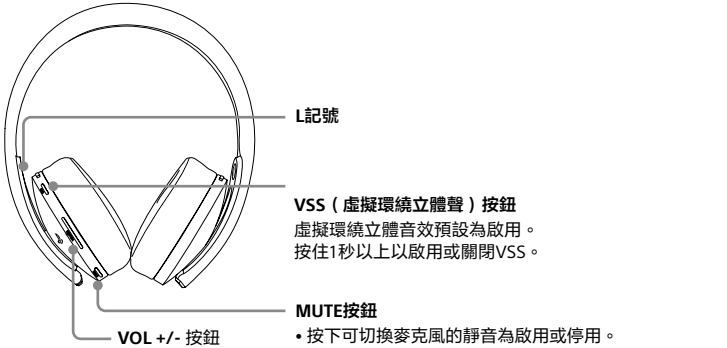 
| |
|--|
| 使用初期注意事項 |
| 使用前務請先 請先詳細閱讀本說明書及對應裝置的說明書，並妥善保存，以備將來參考之用。 |
| 關於安全 |
| <ul style="list-style-type: none">請於安全警告標文、注意事項及使用說明。 請將小零件放在兒童不該拿取的地方保管，避免兒童吞下發生窒息。 |
| 使用和保養 |
| <ul style="list-style-type: none">若您在使用無線耳機組時忽然開始感覺疲勞，或感覺頭暈時，請立即停止使用。如果不良症狀持續存在，請立即就醫。 避免長時間使用無線耳機組，請每 30 分鐘休息一次。 若使用無線耳機組時音量調整過高，可能會導致永久失聰。請將音量調整至安全水平，持續聆聽一段時間後，即應適當降低音量的聽覺感受。聽覺來自可能聽到一般集音，在實際上市可能聽覺高聲，若您感到聽覺輸出音量不正常的狀況，請立即停止使用耳機。若您無法在環境安靜、音場穩定，便會對聽覺造成疲勞，為保護您的聽覺： <ul style="list-style-type: none">使用耳機時請持續適當避免將音量調整過高。 避免長時間使用無線耳機組。 若無法減輕疲勞身體的人的說話聲，請降低音量。 當耳機對您的皮膚造成不適時，請即離開使用。 請勿將耳機靠近高溫處，避免接觸或靠近日光直射的地方。 請在耳機組上安裝耳機。 請勿讓液體或細小零件掉入耳機組。 請勿拆除或破壞無線耳機組，或導致其對強力的外力衝擊。 請在產品包裝上保留所有標籤及指示，瞭解其指定的電子裝置或電磁波產品，例如加油站、醫院、工地、可能破壞的電子裝置或電器上。 本裝置使用的電池若損壞，可能含有發生火災或化學爆炸的危險性。請您在 60°C / 140°F 左右的溫度下分解處理其電池。 |

| | | |
|---|---------------------------|------------------------------------|
| Status indicator display | | |
| Headset | | |
| Indicator color | Flashing pattern | Headset status |
| Blue | Solid | In use |
| | Flashing once repeatedly | Pairing mode |
| | Flashing twice repeatedly | Waiting to connect |
| Red | Solid | Charging |
| Red (Headset turned on) | Flashing once repeatedly | Low battery |
| Red (Headset charging) | Flashing once repeatedly | Battery not charging ¹ |
| Red (Headset turned on, but doesn't play any sound) | Flashing once repeatedly | Firmware update error ² |
| Purple | Solid | Microphone input off |
| Purple | Flashing once repeatedly | Firmware update in progress |

¹ For repair options, visit www.playstation.com/helpme.

² If you see the flashing error light, retry the steps to Restore headset again. If you continue to see the error after the Restore attempt, then visit www.playstation.com/support/wirelessstereohsheadset.

| | | |
|-------------------------|---------------------------|-----------------------|
| Wireless adaptor | | |
| Indicator color | Flashing pattern | Headset status |
| Blue | Solid | In use |
| | Flashing once repeatedly | Pairing mode |
| | Flashing twice repeatedly | Waiting to connect |

| |
|---|
| 各部名稱與機能 |
| 正面 |
|  |
| <ul style="list-style-type: none">頭帶 R 記號 SOUND/CHAT 按鈕 <ul style="list-style-type: none">調整遊戲聲音及聊天語音的相對音量。 麥克風 (內建) <ul style="list-style-type: none">啟用麥克風時，請避免將耳機放置在擴大機(喇叭)附近，以免產生回音 (音場擾亂)。 狀態指示燈 電源 / 聲音模式開關 <ul style="list-style-type: none">切換標準或遊戲/聊天語音電音。位置： <ul style="list-style-type: none">1 - 標準模式 2 - 加重低音模式 (初始) 使用耳機組同伴應用程式時可將此模式更換為聲音模式。 |
| 背面 |
|  |
| <ul style="list-style-type: none">L 記號 VSS (虛擬環繞立體聲) 按鈕 <ul style="list-style-type: none">虛擬環繞立體聲音效開啟或關閉。按在靜音以上音量或關閉時，按在靜音以下音量或關閉時。 MUTE 按鈕 <ul style="list-style-type: none">按一下可切換麥克風的聲音為啟用或停用。 若要關閉麥克風，按在 MUTE 按鈕後需將麥克風一次彈簧，按在 MUTE 按鈕可依序切換語言音聲設定 (高、中、關閉)。 VOL +/- 按鈕 <ul style="list-style-type: none">可調整耳機組的音量。 |
| 底部 |
| |

