

Pea Tunnel Instruction Manual

G4460

General information and safety warnings

- Ensure that you have all parts present prior to assembly.
- Do not load on top of the tunnel.
- Do not allow children to play on or in the tunnel.
- Not suitable for commercial purposes.
- Assemble on a flat surface and in the area that you wish to place your tunnel.
- Position in a sheltered bright place out of direct strong winds


Parts list

4 x arches
8 x staked supports
14 x cross supports
15 x metal inserts
28 x sure-clips
16 x net clips
1 x netting


Assembly

Note: Assembly is easiest with two people.


1. Ensure that you have all parts listed and lay them out on a flat, clean surface.
2. Attach the 2 cross supports together using the metal inserts. Repeat until you have 7 assembled cross supports.

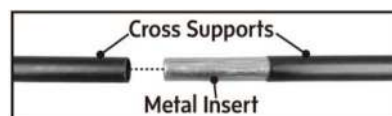


3. Stand the arches upright and place an assembled cross support along the top of them. Spread the arches apart so that they are evenly spread out.
4. Attach 3 cross supports to the arches, using the sure-clips.

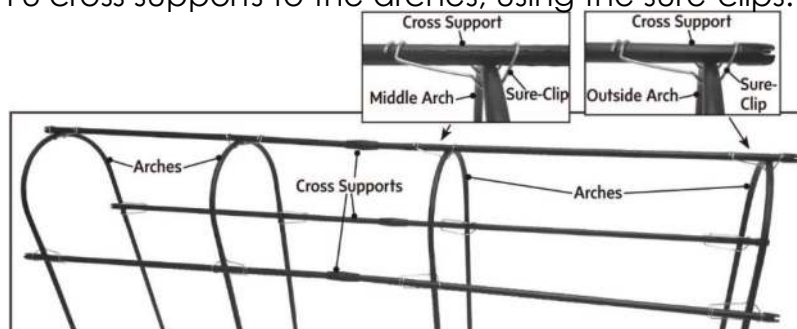

Tip: When attaching a cross support using the sure-clips, remember that the support should always be on the outside of the arches and that the curved part of the clips will always be facing towards the inside of the pea tunnel.

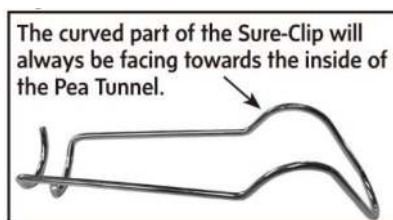

5. Carefully rotate the frame onto its side and connect each arch with the staked supports using the metal inserts. Carefully rotate the frame back upright.
6. Attach the 4 remaining cross supports to the newly attached staked supports.

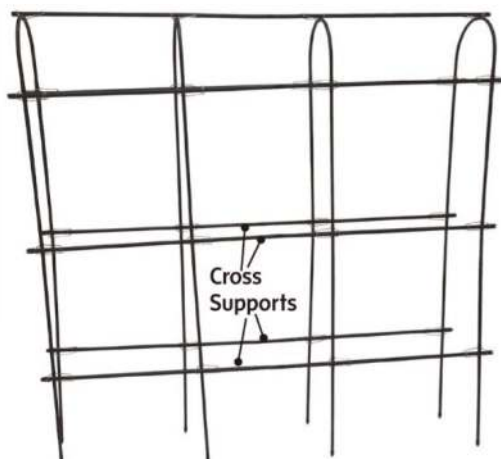

7. Carefully unfold the netting and spread it over the frame. Loop the netting into the hooks on the ends of the cross supports.



8. Place the netting clips along the sides of the frame to secure the netting. Press down on the tab in the back of the clips to lock them into place.
9. Press the ground pegs into the ground as far as possible (around 12-14 inches) to make sure it's secure.



GUARANTEE

IMPORTANT

**Please do not return this product without first calling the Customer Service number below:
0871 911 7031***

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

Register your product for an extended 2-year warranty by visiting our website www.gardengearonline.co.uk. The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

After Sales Customer Service:

Customer Service Department, Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP, UK

Telephone: 0871 911 7031*

E-mail customerservice@gardengearonline.co.uk

Please retain for future reference.

Colours and contents may vary.

*Calls cost 13p per minute plus your phone company's access charge