

PlayStation.

Wireless headset

Headset: CUHYA-0080

Wireless Adaptor: CUHYA-0081

Instruction Manual

For more instructions about the use of this product (including the Headset Companion app), visit playstation.com/helpme.

FRONT
<div></div> <div>Headband</div>
<div></div> <div>R marking</div>
<div></div> <div>SOUND/CHAT buttons <p>Adjust the chat voice volume in relation to the game sound.</p> </div>
<div></div> <div>Microphone (integrated) <p>Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise).</p> </div>
<div></div> <div>Status indicator <p>Power/audio mode switch <p>Sets the audio mode or turns off headset.</p> <p>Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app.</p> </p></div>
REAR
<div></div> <div>L marking</div>
<div></div> <div>VSS (Virtual Surround Sound) button <p>The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off.</p> </div>
<div></div> <div>MUTE button <p>Press to switch microphone MUTE on and off. <ul style="list-style-type: none">To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. <p>Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off.</p> </p></div>
<div></div> <div>VOL +/- buttons <p>Adjusts the volume of the headset.</p> </div>
EN

Precautions

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.

Safety

- Observe all warnings, precautions, and instructions.
- CHOKING HAZARD - Small parts. Keep out of the reach of small children.
- Use and handling**
 - Stop using the wireless headset immediately if you begin to feel tired or if you experience discomfort or pain in your head while operating the wireless headset.
 - Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:
 - Limit the amount of time you use the headset at high volume.
 - Avoid raising the volume to block out noisy surroundings.
 - Lower the volume if you can't hear people speaking near you.
 - If you feel that the headset is irritating your skin, stop using it immediately.
 - Do not expose the headset to high temperatures, high humidity or direct sunlight.
 - Do not put heavy objects on the headset.
 - Do not allow liquid or small particles to get into the headset.
 - Do not throw or drop the headset, or subject it to strong physical shock.
 - Do not place any rubber or vinyl materials on the headset exterior for an extended period of time.
 - Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.
 - Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you.
 - Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft.
 - The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate.

- Headset**
 - Avoid prolonged use of the wireless headset. Take a break at about 30-minute intervals.
 - Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:
 - Limit the amount of time you use the headset at high volume.
 - Avoid raising the volume to block out noisy surroundings.
 - Lower the volume if you can't hear people speaking near you.
 - If you feel that the headset is irritating your skin, stop using it immediately.
 - Do not expose the headset to high temperatures, high humidity or direct sunlight.
 - Do not put heavy objects on the headset.
 - Do not allow liquid or small particles to get into the headset.
 - Do not throw or drop the headset, or subject it to strong physical shock.
 - Do not place any rubber or vinyl materials on the headset exterior for an extended period of time.
 - Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.
 - Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you.
 - Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft.
 - The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate.

Bottom
<div></div> <div>USB port <p>Connect to a supported USB device to charge the headset.</p> </div>
<div></div> <div>Audio input jack <p>When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off.</p> </div>
<div></div> <div>Wireless adaptor <p>Reset button</p> <p>Status indicator</p> </div>

Output to Headphones	VSS (Virtual Surround Sound) button	SOUND/CHAT buttons
All Audio	Enabled	Enabled
Chat Audio	Disabled	Disabled

NOTE:

On a PS4™ system, the wireless headset defaults to "ON" [All Audio].

Using the headset with a computer

You can use the headset with a PC (with Windows® or macOS) that has a USB port. Insert the wireless adaptor into a USB port on the computer you want to use and then turn on the headset.

Hints

- The headset might not work with some computers.
- The VSS (Virtual Surround Sound) button and SOUND/CHAT buttons can be used only when the headset is connected to a PS4™ system.

Using your headset with PlayStation VR

You can use an audio cable to connect your headset to the stereo headphone jack of PlayStation VR. This will output all game audio processed by the PlayStation VR, including 3D audio if supported by the game title.

Note
This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note
This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Using the headset with a portable device

You can use an audio cable to connect your headset to the headphone jack of compatible devices.

Part names and functions
<div></div> <div>Front</div>
<div></div> <div>Headband</div>
<div></div> <div>R marking</div>
<div></div> <div>SOUND/CHAT buttons <p>Adjust the chat voice volume in relation to the game sound.</p> </div>
<div></div> <div>Microphone (integrated) <p>Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise).</p> </div>
<div></div> <div>Status indicator <p>Power/audio mode switch <p>Sets the audio mode or turns off headset.</p> <p>Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app.</p> </p></div>
REAR
<div></div> <div>L marking</div>
<div></div> <div>VSS (Virtual Surround Sound) button <p>The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off.</p> </div>
<div></div> <div>MUTE button <p>Press to switch microphone MUTE on and off. <ul style="list-style-type: none">To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. <p>Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off.</p> </p></div>
<div></div> <div>VOL +/- buttons <p>Adjusts the volume of the headset.</p> </div>
EN

FRONT
<div></div> <div>Headband</div>
<div></div> <div>R marking</div>
<div></div> <div>SOUND/CHAT buttons <p>Adjust the chat voice volume in relation to the game sound.</p> </div>
<div></div> <div>Microphone (integrated) <p>Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise).</p> </div>
<div></div> <div>Status indicator <p>Power/audio mode switch <p>Sets the audio mode or turns off headset.</p> <p>Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app.</p> </p></div>
REAR
<div></div> <div>L marking</div>
<div></div> <div>VSS (Virtual Surround Sound) button <p>The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off.</p> </div>
<div></div> <div>MUTE button <p>Press to switch microphone MUTE on and off. <ul style="list-style-type: none">To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. <p>Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off.</p> </p></div>
<div></div> <div>VOL +/- buttons <p>Adjusts the volume of the headset.</p> </div>
EN

Precautions

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.

Safety

- Observe all warnings, precautions, and instructions.
- CHOKING HAZARD - Small parts. Keep out of the reach of small children.
- Use and handling**
 - Stop using the wireless headset immediately if you begin to feel tired or if you experience discomfort or pain in your head while operating the wireless headset.
 - Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:
 - Limit the amount of time you use the headset at high volume.
 - Avoid raising the volume to block out noisy surroundings.
 - Lower the volume if you can't hear people speaking near you.
 - If you feel that the headset is irritating your skin, stop using it immediately.
 - Do not expose the headset to high temperatures, high humidity or direct sunlight.
 - Do not put heavy objects on the headset.
 - Do not allow liquid or small particles to get into the headset.
 - Do not throw or drop the headset, or subject it to strong physical shock.
 - Do not place any rubber or vinyl materials on the headset exterior for an extended period of time.
 - Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.
 - Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you.
 - Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft.
 - The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate.

- Headset**
 - Avoid prolonged use of the wireless headset. Take a break at about 30-minute intervals.
 - Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:
 - Limit the amount of time you use the headset at high volume.
 - Avoid raising the volume to block out noisy surroundings.
 - Lower the volume if you can't hear people speaking near you.
 - If you feel that the headset is irritating your skin, stop using it immediately.
 - Do not expose the headset to high temperatures, high humidity or direct sunlight.
 - Do not put heavy objects on the headset.
 - Do not allow liquid or small particles to get into the headset.
 - Do not throw or drop the headset, or subject it to strong physical shock.
 - Do not place any rubber or vinyl materials on the headset exterior for an extended period of time.
 - Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.
 - Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you.
 - Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft.
 - The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate.

Bottom
<div></div> <div>USB port <p>Connect to a supported USB device to charge the headset.</p> </div>
<div></div> <div>Audio input jack <p>When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off.</p> </div>
<div></div> <div>Wireless adaptor <p>Reset button</p> <p>Status indicator</p> </div>

Output to Headphones	VSS (Virtual Surround Sound) button	SOUND/CHAT buttons
All Audio	Enabled	Enabled
Chat Audio	Disabled	Disabled

NOTE:

On a PS4™ system, the wireless headset defaults to "ON" [All Audio].

Using the headset with a computer

You can use the headset with a PC (with Windows® or macOS) that has a USB port. Insert the wireless adaptor into a USB port on the computer you want to use and then turn on the headset.

Hints

- The headset might not work with some computers.
- The VSS (Virtual Surround Sound) button and SOUND/CHAT buttons can be used only when the headset is connected to a PS4™ system.

Using your headset with PlayStation VR

You can use an audio cable to connect your headset to the stereo headphone jack of PlayStation VR. This will output all game audio processed by the PlayStation VR, including 3D audio if supported by the game title.

Note
This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note
This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Using the headset with a portable device

You can use an audio cable to connect your headset to the headphone jack of compatible devices.

Initial setup

1 Charge the headset by connecting it to a USB port with a USB cable. The headset may need up to 3.5 hours to charge fully.

- Insert the wireless adaptor into the USB port.
- Slide the power switch on the headset to position "1" or "2".
- Use the headset with PlayStation 4 systems

Using the headset with PlayStation 4 systems

This headset is compatible with PS4™ system software version 5.00 or later. More than one headset can be used with a PS4™ system.

Always update your system software to the latest version.

Status display
When first connecting to a PS4™ system or when changing the settings, the following status information is displayed in the upper left corner of the screen:

	Headset
	
	
	
	

	Displayed when Virtual Surround Sound is enabled
	Displays volume level
	Displayed when the microphone is turned off
	Displays battery charge level

Stereo Headset Audio Extension is a system setting that controls the type of audio output to the wireless headset. It is available only when the wireless adaptor is inserted.

Audio output selection

With the wireless headset you can listen to audio from the PS4™ system—including music, videos, and games—in Virtual Surround Sound.

- You can listen to both game audio and chat audio simultaneously. Use the SOUND/CHAT buttons to adjust the relative volume of game audio versus chat audio.
- You can change the audio output to the headset so that you can hear only chat audio.

To change the audio output select (Settings) (Devices) (Audio Devices) (Output to Headphones).

Output to Headphones	VSS (Virtual Surround Sound) button	SOUND/CHAT buttons
All Audio	Enabled	Enabled
Chat Audio	Disabled	Disabled

NOTE:

On a PS4™ system, the wireless headset defaults to "ON" [All Audio].

Using the headset with a computer

You can use the headset with a PC (with Windows® or macOS) that has a USB port. Insert the wireless adaptor into a USB port on the computer you want to use and then turn on the headset.

Hints

- The headset might not work with some computers.
- The VSS (Virtual Surround Sound) button and SOUND/CHAT buttons can be used only when the headset is connected to a PS4™ system.

Using your headset with PlayStation VR

You can use an audio cable to connect your headset to the stereo headphone jack of PlayStation VR. This will output all game audio processed by the PlayStation VR, including 3D audio if supported by the game title.


Note
This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Using the headset with a portable device

You can use an audio cable to connect your headset to the headphone jack of compatible devices.

- On PlayStation/Vita systems, you can listen to audio in standard stereo format and use the voice chat feature.

- On other mobile devices, you can listen to audio in standard stereo format only. The headset may need up to 3.5 hours to charge fully.

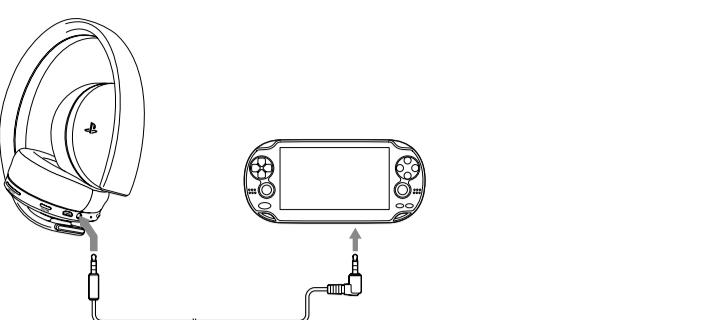

Hints

- When the included audio cable is connected to the headset, the VSS (Virtual Surround Sound) button and the SOUND/CHAT buttons cannot be used.
- Output volume varies depending on the portable device that is connected. Adjust volume accordingly.
- If you use the supplied audio cable to connect the headset to your mobile device to listen to audio content and talk on the phone.
 - If you are unable to hear audio content using the cable with your mobile device, turn off headset power.
 - Your device may only support use of a standard audio cable (not included) to listen to audio content using the headset. Note that standard audio cables do not support voice communication.
 - This product is not compatible with all mobile devices. Some features may not work on all mobile devices.

Charging the headset

When remaining battery level is low, the status indicator flashes red and a beep is heard. Charge the battery by connecting the headset to a supported USB device such as a PC. While the battery is charging, the status indicator lights up red. The status indicator light turns off when the battery is fully charged.

Hints

- You can view the remaining battery charge on a PS4™ system. It is shown on the status display that appears when you change the headset settings.
- You might not be able to charge the battery if the USB device or the USB hub does not provide enough power for charging. Try connecting the headset to a different USB device or a different USB connector on the device.

- Charging takes approximately 3.5 hours when starting with no battery charge left.
- When the remaining battery charge is low, the headset beeps while it is connected and receiving an audio signal.

- It is recommended that you charge the battery in an environment with a temperature of 5 °C - 35 °C / 41 °F - 95 °F. Charging in other environments might not be as effective.

- If you do not plan to use the wireless headset for an extended period of time, it is recommended that you fully charge it at least once a year to help maintain battery functionality.

Status indicator display

Headset		
Indicator color	Flashing pattern	Headset status
Blue	Solid	In use
	Flashing once repeatedly	Pairing mode
	Flashing twice repeatedly	Waiting to connect
Red	Solid	Charging
Red (Headset turned on)	Flashing once repeatedly	Low battery
Red (Headset charging)	Flashing once repeatedly	Battery not charging ¹
Red (Headset turned on, but doesn't play any sound)	Flashing once repeatedly	Firmware update error ²
Purple	Solid	Microphone input off
Purple	Flashing once repeatedly	Firmware update in progress

¹ For repair options, visit us.playstation.com/helpme.

² If you see the flashing error light, retry the steps to Restore headset again. If you continue to see the error after the Restore attempt, then visit us.playstation.com/support/wirelessstereoh headset.

Wireless adaptor		
Indicator color	Flashing pattern	Headset status
Blue	Solid	In use
	Flashing once repeatedly	Pairing mode
	Flashing twice repeatedly	Waiting to connect

PlayStation.

無線耳機組

耳機組: CUHYA-0080

無線遙控器: CUHYA-0081

使用說明書

若要了解更多產品的使用說明 (包含耳機組同伴應用程式) , 請前往 playstation.com/helpme (僅提供英文)。

各部名稱與機能
<div></div> <div>正面</div>
<div></div> <div>頭帶</div>
<div></div> <div>R記號</div>
<div></div> <div>SOUND/CHAT按鈕 <p>調整遊戲音效與聊天語音的相對音量。</p> </div>
<div></div> <div>麥克風 (內建) <p>啟用麥克風時, 請將麥克風放置在擴大機(喇叭)附近, 以免產生回音 (音響擾亂)。</p> </div>
<div></div> <div>狀態指示燈 <p>電源 / 聲音模式開關 <p>切換無線耳機電源的電源位置。 <ul style="list-style-type: none">標準模式 2 - bass 低音模式 (初始) 使用耳機組同伴應用程式時可將此模式更換為聲音模式。</p> </p></div>
背面
<div></div> <div>L記號</div>
<div></div> <div>VSS (虛擬環繞立體聲) 按鈕 <p>虛擬環繞立體音效開啟或關閉。按在此處, 將音源PS4™主機或其它媒体。啟用靜音時, 將靜音音效關閉。</p> </div>
<div></div> <div>MUTE按鈕 <p>按一下可切換麥克風的靜音為啟用或停用。 <ul style="list-style-type: none">若要變更靜音狀態, 按住MUTE按鈕直到聽到第一次響聲。 按按MUTE按鈕可依序切換靜音音量設定 (高、中、關閉)。</p> <p>側音是讓您可以聽到自己聲音的功能。側音音源由此聲源、音源由PS4™主機或其它媒体。啟用靜音時, 將靜音音效關閉。</p> </div>
<div></div> <div>VOL +/- 按鈕 <p>可調整耳機組的音量。</p> </div>
<div></div> <div>USB連接埠 <p>連接到支援的USB裝置來為耳機組充電。</p> </div>
<div></div> <div>聲音輸入連接埠 <p>當使用附贈的USB連接線將耳機組連至行動裝置使用時, 將靜音功能關閉。</p> </div>
底部
<div></div> <div>再啟動按鈕</div>
<div></div> <div>狀態指示燈</div>

	當啟用虛擬環繞時會顯示
	顯示音量大小
	關閉麥克風時會顯示
	顯示電池充電量

位置與耳機組音效擴充器用來控制無線耳機組輸出音源類型的系統設定。僅在無線遙控器插入時會顯示。

繁體中文

使用初期設定

安裝前準備: 請先詳細閱讀本說明書及對應裝置的說明書, 並妥善保存, 以備將來參考之用。

關於安全

- 請於安全使用時, 注意事項及使用限制。
- 請小心零件或在兒童看不見的地方保管, 避免兒童吞下發生窒息。
- 使用和保養**
 - 若您在使用無線耳機組時忽然開始感覺疲勞, 或感覺頭暈時, 請立即停止使用。如果不良症狀持續存在, 請立即就醫。
 - 避免長時間使用無線耳機組, 請每30分鐘休息一次。
 - 若使用無線耳機組時音量調整過高, 可能會導致永久失聰。請將音量調整至安全水平, 持續聆聽一段時間後, 即應休息並聽取聽力的健康檢查。聽覺來自可能聽到一般聽覺, 在實際上卻可能聽覺漸漸變弱。若您感到聽覺輸出音量不正常的狀況, 請立即停止使用耳機組, 並諮詢您的耳鼻喉科醫生。若症狀嚴重, 會對您的聽覺造成傷害。為您保守聽覺的建議:
 - 使用耳機組時請盡量避免將音量調整過高。
 - 避免長時間使用無線耳機組聽音。
 - 若無法理解您的皮膚瘙癢或不適時, 請勿繼續使用。
 - 當耳機對您的皮膚造成不適時, 請勿繼續使用。
 - 請勿將耳機組放在高溫、潮氣或陽光直射的地方。
 - 請勿在耳機組上放置重物。
 - 請勿讓液體或細小零件掉入耳機組。</

